



A SMALL GUARDIAN ANGEL FOR EVERY BABY ON YOUR WARD

Benefits:

- ◆ Constant report of baby's real-time location
- ◆ Full audit trail: alarms, movements, state changes (activation/suspension/discharge)
- ◆ Seamless integration with IT and security systems
- ◆ Reusable Tags
- ◆ Lightweight design
- ◆ CCTV integration
- ◆ Access Control integration
- ◆ Text messaging to SMS, pagers, DECT and large format displays
- ◆ Backup controllers for full redundancy
- ◆ Competitive edge for your hospital
- ◆ Access the system from around your enterprise with Eiris client server alarm software

Supported by: **Elpas™** *Local Positioning Systems* **SpiderAlert™** *Signaling Network Solutions* **VisAccess™** *Access Control Solutions*

Head Office (International):

23 Habarzel Street
Tel Aviv, 69710, Israel
Tel: 972-3-768-1400
Fax: 972-3-768-1415
email: marketing@visonictech.com
www.visonictech.com

VTA (Visonic Technologies Americas):

65 West Dudley Town Rd.
Bloomfield, CT 06002, USA
Tel: 1-800-223-0020
Fax: 1-860-242-8094
email: vta_marketing@visonictech.com

VT UK (Visonic Technologies UK):

P.O.Box 414
Beckenham, Kent BR3 9BF
Tel: 44-870-730-0840
Fax: 44-870-730-0839
email: vtuk_marketing@visonictech.com

 **Visonic Technologies**
Enterprise Protection Solutions

 **Visonic Technologies**
Enterprise Protection Solutions



BabyMatch™

Two infants are bathed and each are accidentally returned to the incorrect bassinet. A mother picks up “her” child according to the bassinet label, unaware that a swap has taken place. Fortunately, this hospital is equipped with BabyMatch™. When mother attempts to leave the area with the wrong baby, an announcement is made and nearby nurses are notified.

ELPAS Infant Tagging

BabyMatch provides staff and parents the comfort of knowing that babies are only handled by the right people and that infant whereabouts is always known.

Constant Safety


Maternity wards are handling more and more births. Keeping track of the growing number of babies has become challenging for even the most modern hospitals. BabyMatch provides a constant real-time baby monitoring solution. Nurses are alerted immediately upon unauthorized baby tag activity and are provided with a continuous view of baby locations.

Exit Alarm

When a baby approaches an exit, Nurses and Security are notified by audio, visual and text alarms. Standard LON relay devices can be used to control door locks or elevators.

Escort

A baby requiring treatment from a different department can be escorted through an exit by an authorized member of staff with an ELPAS personnel badge. Alternatively, a baby's tag can be specifically disarmed when required by using a keypad and private PIN code. The tag rearms automatically when the infant wearing it returns to the ward.

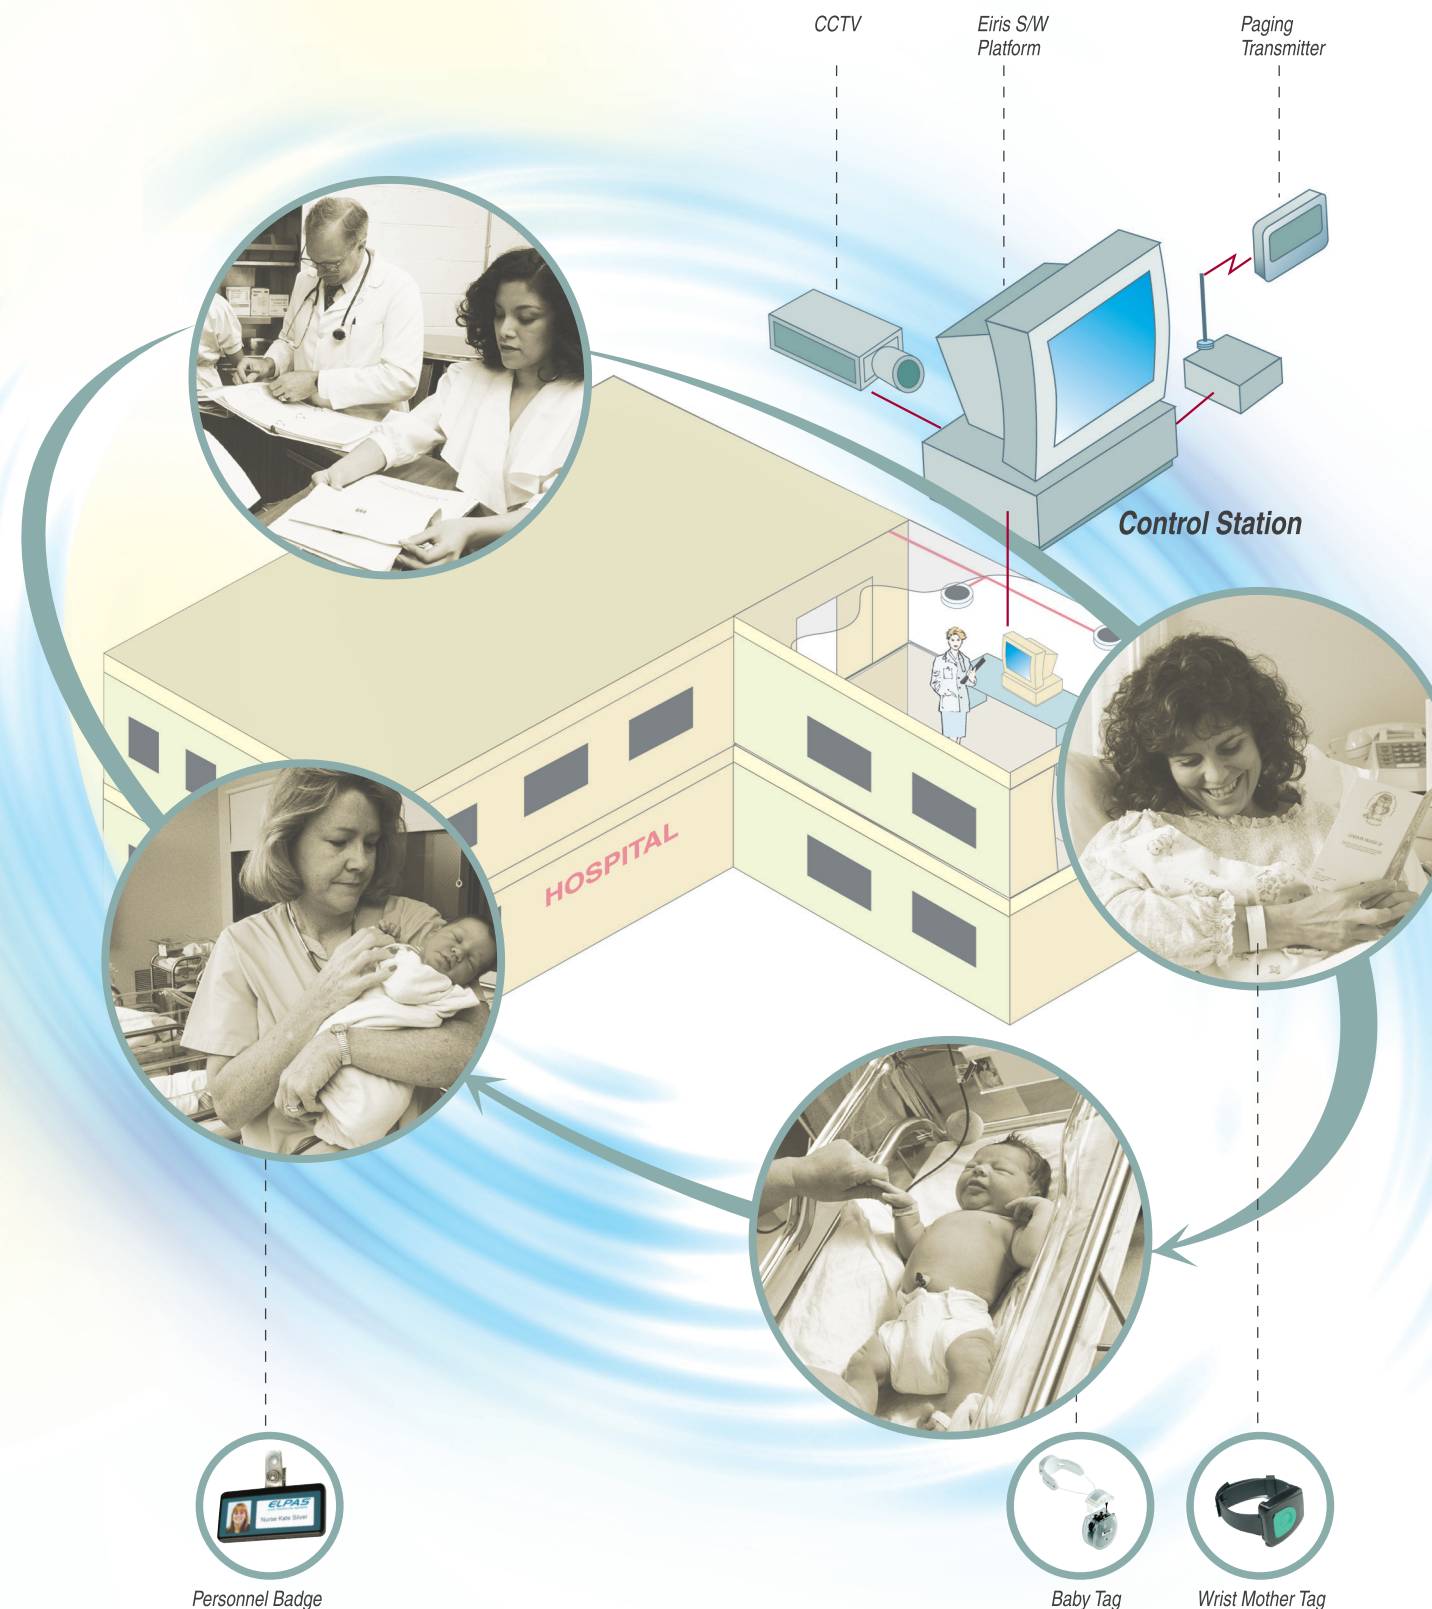

Tamper Alarm

The ELPAS baby tag is easily attached and is activated by simply clicking the disposable band onto the reusable tag. If the tag is removed, a tamper alarm will sound indicating the location of the baby.

Missing Alarm

Should the system cease to receive a tag's radio transmission, a "Missing" alarm is sounded and the baby's last known location is indicated.

Match Tests

Using ELPAS Mother Tags, a mother can test for a match at any time and receive an audio or visual confirmation that the baby she is with is her own. Match tests can be performed by both parents and for twins/triplets.

Simple Tag Attachment

Place the band on the baby's ankle, resize the band to fit and just click on the tag. Immediately, the baby is protected. As most babies lose weight during the first 48 hours after birth, the band may be tightened without having to remove the tag.

Easy to use Software

The intuitive EIRIS™ software is built for easy interactivity and designed with convenient touch screens that enable the nurse to monitor alarms, discharge tags and assign baby names. The staff may also generate reports on all tag events including enrollment/disarm/discharge, alarms and tag movements around the ward.